

Important: If you are not a trained motorcycle mechanic, stop now. Ask a motorcycle shop to do the work for you.


These clamps are designed to mount LSL handlebars, type "Fat Bar X00 or X01" on original Buell top yokes.

The position of the handlebar will change by the offset. Please make sure, that all Bowden-cables and lines offer free wheel and no tension.


1. Make sure, that the handlebar has got sufficient clearance to the fuel tank.
2. All lines/cables must have the necessary length.
3. Secure all lines/cables against bending, twisting or squashing.
4. The bending radius of hoses has to be above 40mm. Hoses may not twist when suspension is working or fork is moved across the steering angle.
5. If necessary use longer/shorter brake- and clutch-lines, according to the FMVSS 106 standard.

Fitting: Demount the original handlebar and clamps (Ø22mm). Now mount the new clamps and "Fat Bar" handlebar (Ø28.5mm) as shown in picture 2. The distance "X" should have the same size on both sides, as shown in picture 1.

After the fitment, please control all bolted connections!

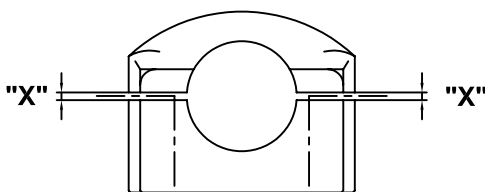

pic.1

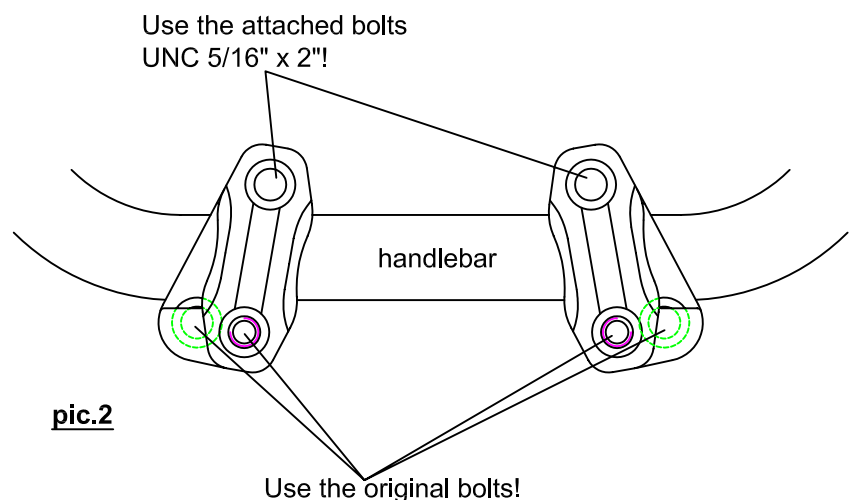

pic.2

